




DoggyRide® Original

Stroller kit User manual

Wandel kit Gebruikershandleiding

Afbeelding 1

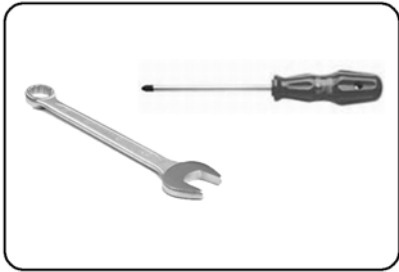

Benodigd gereedschap voor het monteren van de wandelkit is een steek of ringsleutel nr. 10 en een sterschroevendraaier.

Afbeelding 2




Plaats de 2 plastic houders aan de achterzijde op het Frame van de DoggyRide, positioneer deze boven de hiervoor bestemde gaten, en zet ze vast met de meegeleverde moeren.

Afbeelding 3



Positioneer de duwstang in de plastic houders. Stel de juiste hoogte van de duwstang vast en duw vervolgens de veiligheidspen door het juiste gat.

Afbeelding 4

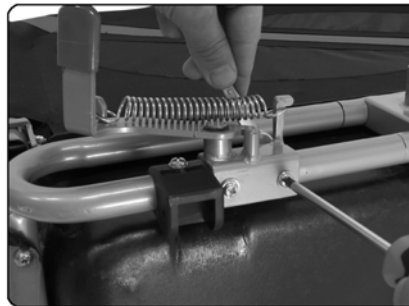

Positioneer de voetrem boven de 2 gaten aan de achterzijde van het frame. Zet de voetrem vervolgens vast met de meegeleverde moeren.

Afbeelding 5




U kunt de voetrem vast zetten door met uw voet op de rode stang te duwen. Om de trailer van de rem af te halen duwt u de rode stang met uw voet omhoog.

Afbeelding 6



Het loopwiel kan aan de voorzijde worden geplaatst, positioneer deze in de bus en zet hem vervolgens vast met de snelsluitpen.

Afbeelding 1

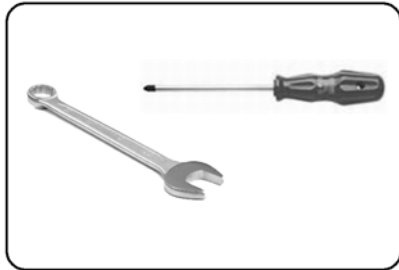

Needed tools are a size 10 wrench and a philips head screwdriver.

Afbeelding 2




Place the 2 plastic pushbar holders on the back of the trailer, positioned above the 2 holes. Fix the 2 holders with the 4 bolts.

Afbeelding 3



Determine the correct position for the push bar and connect the push bar by pushing the detent ring pin through one of the 2 holes.

Afbeelding 4

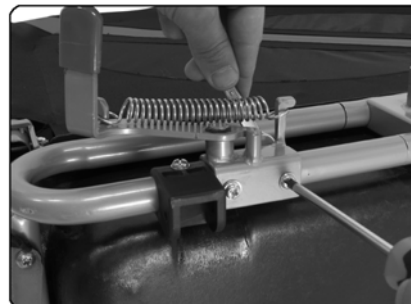

Place the parking brake on the correct position above the holes on the back of the trailer. Fix the parking brake with the 2 bolts.

Afbeelding 5



When parking the trailer push down the red lever with you foot to activate the brake. Push up the red lever to deactivate the brake.

Afbeelding 6



Fix the jogger wheel on the front of the trailer. Position the holes aligned of each other and fix the quick release pin through the holes.

Contact

US & Canada**Montare LLC**

Tel: +1-425-868-3100

Fax: +1-425-836-9679

e-mail: info@doggyride.comWebsite: www.doggyride.com**Europe****Montare LLC**

Tel: +31 30 657 57 67

Fax: +31 30 659 03 49

e-mail: info@doggyride.nlWebsite: www.doggyride.nl